

SYSTEM ON/OFF - Designed to send Power On/Off commands for up to five components with one button press. **WE DO NOT RECOMMEND USING THIS BUTTON**

MENU - Displays the Applications menu. Press once to display search menu. Press twice for box menu.

GUIDE - Displays the program guide listings.

SETTINGS - Displays settings menu.

OK/SELECT - Selects highlighted screen options.


VOLUME - Raises or lowers the sound.

MUTE - Silences the audio. Press to activate. Press again to restore sound to the previous level.

FAV - Displays favorite channels.

NUMBER PAD - Enter numbers to tune to channels. Also, make numeric entries on on-screen menus.

Note: You can also use the CH or the program guide as alternate ways to tune to channels.

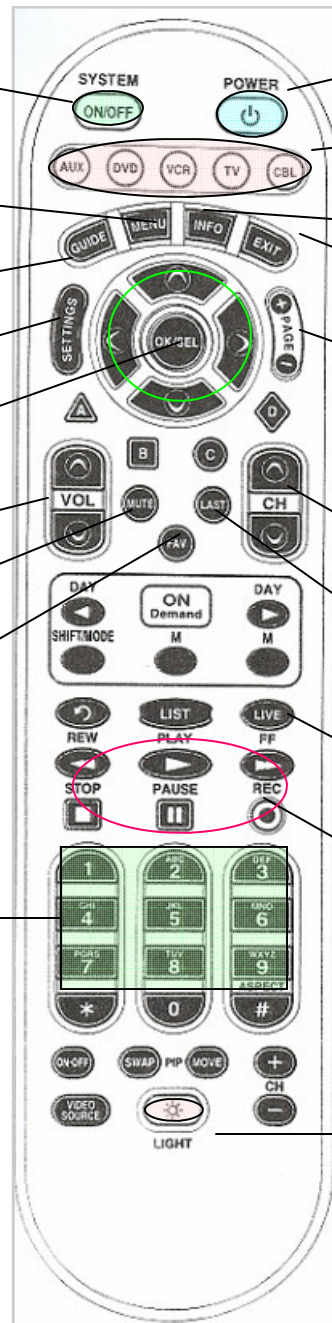

POWER - Allows you to turn your TV, VCR, DVD, AUX and Cable Box On and Off.

AUX, DVD, VCR, TV, CBL - Used to select the component you want to operate and signals remote.

INFO - Displays information about the program currently playing or highlighted in the program.

EXIT - Exit from current screen.

PAGE +/- - Accesses pages above or below the information currently displayed.

CURSOR NAVIGATION PAD - Navigate to and highlight an item from the on-screen.

CHANNEL - Selects the next higher or lower channel.

LAST - Returns to the previously tuned channel.

LIVE - For DVR - Displays current programming.

VCR/DVD KEYS - Perform standard VCR and DVD functions when in VCR and DVD mode. and Video-On-Demand functions when in CABLE mode.

LIGHT BUTTON - Press to backlight all keypad buttons. Press again to turn off (or simply wait 10 seconds for automatic shut-off.)



Beloit 534-1111 Concordia 243-4068
Belleville 527-2226 Glen Elder 1-800-287-8495

www.cunninghamtelephoneandcable.com